



INSTALLATION MAINTENANCE

Ceiling Surface Fixture Plafonnier


EUREKA JUNCTION BOX 3983
(AVAILABLE FOR SHIPPING IN ADVANCE)
BOITE DE JONCTION EUREKA 3983
(DISPONIBLE POUR LIVRAISON EN AVANCE)

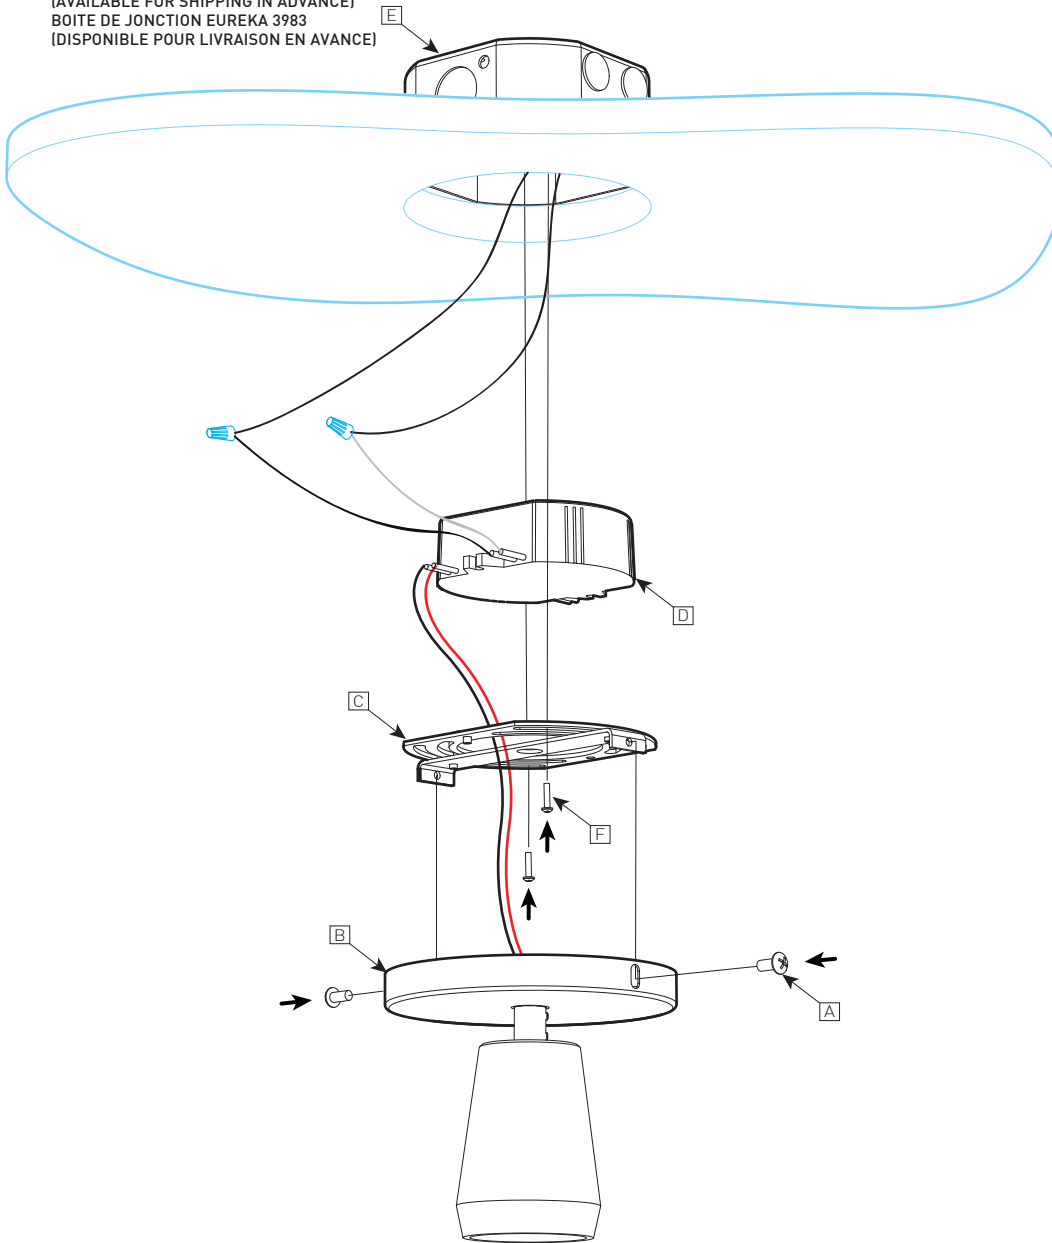

 
BULBS
AMPOULES



MR16C.50W

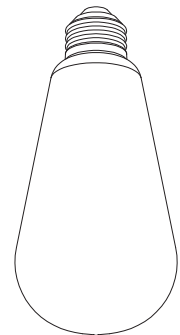

INC MED 60W

 

LED.4W

INSTALLATION

REMOVE SCREWS [A] (8-32 X 3/8in) TO RELEASE THE CANOPY [B] FROM THE UNIVERSAL CROSSBAR [C].

- 1 - PLACE THE DRIVER (D) INSIDE THE JUNCTION BOX (E).
MAKE THE ELECTRICAL CONNECTIONS AND INSTALL THE UNIVERSAL PLATE (C),
(WIRE NUTS AND SCREWS (F) NOT SUPPLIED)
- 2 - INSTALL THE CANOPY [B] AND SCREW INTO PLACE.

MAINTENANCE

- 3 - EXCEPT FOR LED VERSION, INSERT LAMPS (NOT SUPPLIED) INTO SOCKETS.

INSTALLATION

DÉVISSER LES 2 VIS [A] (8-32 X 3/8in) POUR LIBÉRER LE PAVILLON [B] DE LA PLAQUE UNIVERSELLE [C].

- 1 - PLACER LE PILOTE (D) DANS LA BOITE DE JONCTION (E).
FAIRE LA CONNEXION DES FILS ET INSTALLER LA PLAQUE UNIVERSELLE [C].
(MARRETTES ET VIS (F) NON INCLUSES)
- 2 - INSTALLER LE PAVILLON [B] ET VISSER EN PLACE.

MAINTENANCE

- 3 - SAUF POUR LA VERSION LED, INSÉRER LES AMPOULES (NON FOURNIES) DANS LES DOUILLES.



225 de Liège Ouest, Suite #200
Montréal (QC), Canada H2P 1H4
Tel : 514.385.3515 Fax : 514.385.4169
www.eurekalighting.com



4520 - MCC
Alver