

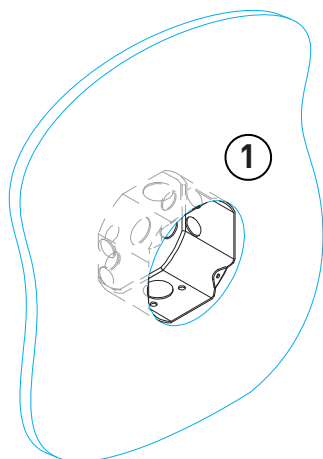
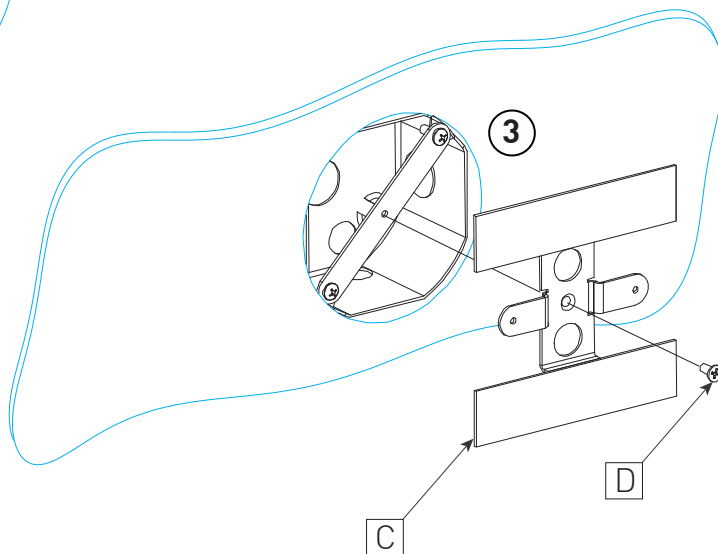


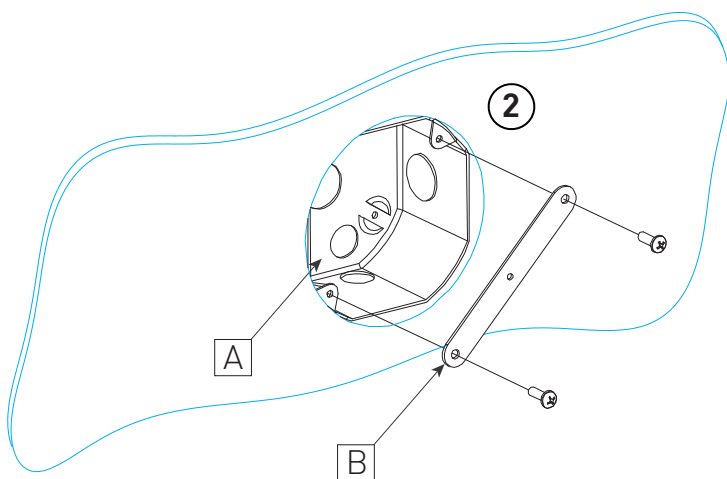

NOTE:
Installation to standard junction box
to be recessed by 1/4".

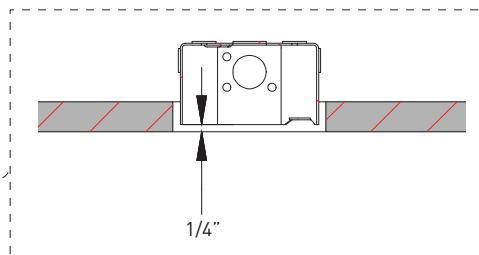

INSTALLATION

- 1 - INSTALL JUNCTION BOX [A] IN ACCORDANCE WITH ELECTRICAL CODE
NOTE: J-BOX MUST BE RECESSED BY 1/4 INCH
- 2 - INSTALL THE CROSSBAR [B] TO THE JUNCTION BOX
- 3 - INSTALL THE WALL PLATE [C] TO THE CROSSBAR. MAKE SURE THE WALL PLATE IS STRAIGHT BEFORE TIGHTENING THE SCREW [D]

INSTALLATION

- 1 - INSTALLER LA BOÎTE DE JONCTION [A] CONFORMÉMENT AU CODE ÉLECTRIQUE
NOTE: LA BOÎTE DE JONCTION DOIT ÊTRE ENCASTRÉ DE 1/4 POUCHE
- 2 - INSTALLER LA BARRE TRANSVERSALE [B] SUR LA BOÎTE DE JONCTION
- 3 - INSTALLER LA PLAQUE MURALE [C] SUR LA BARRE TRANSVERSALE. S'ASSURER QUE LA PLAQUE MURALE SOIT BIEN DROITE AVANT DE SERRER LE VIS [D]



EUREKA

225 de Liège Ouest, Suite #200
Montréal (QC), Canada H2P 1H4
Tel : 514.385.3515 Fax : 514.385.4169
www.eurekalighting.com



3984
WALL PLATE