



INSTALLATION


1

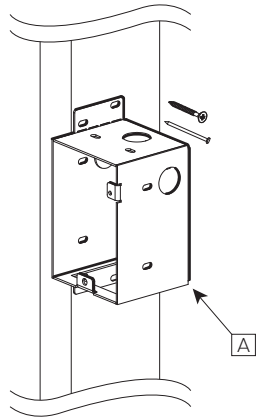

2

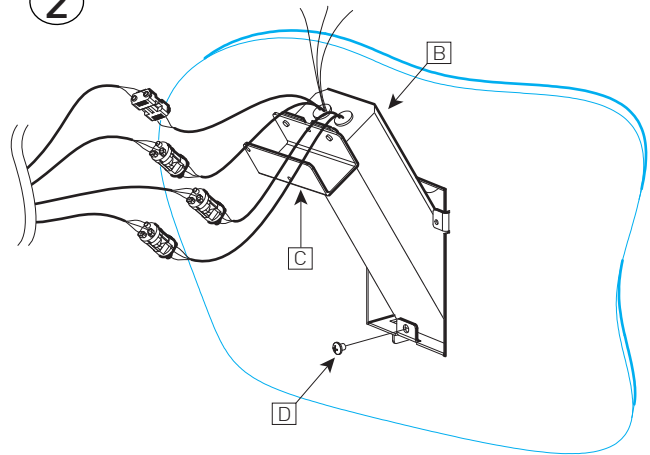

3

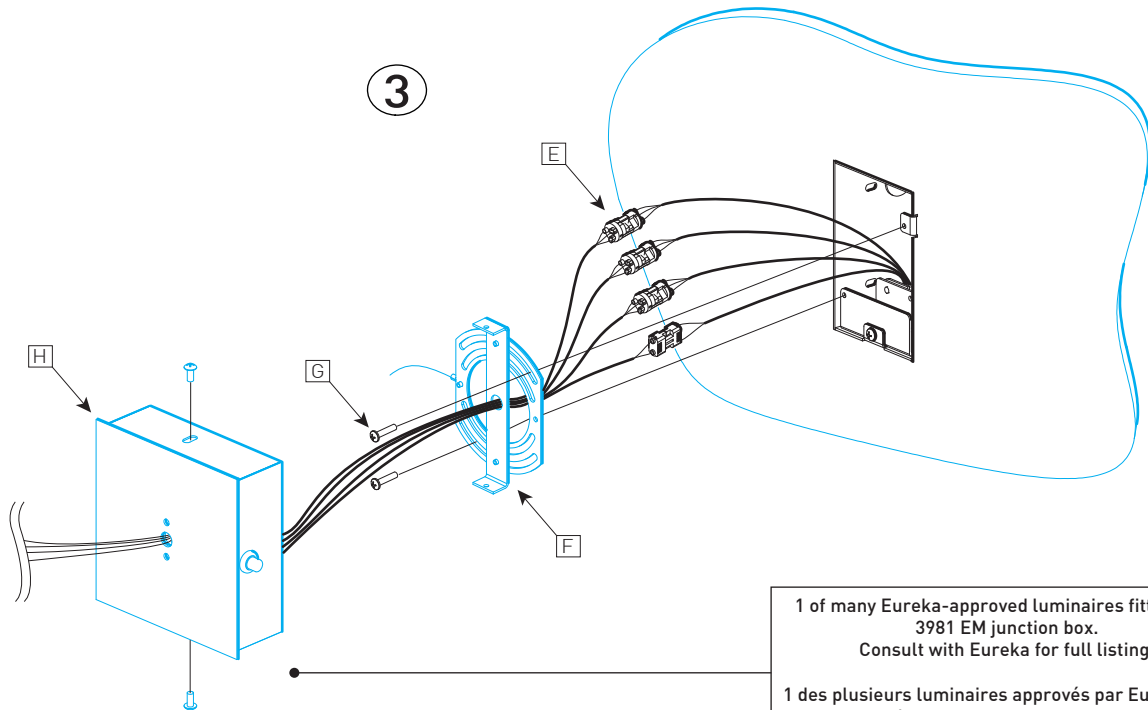

1 of many Eureka-approved luminaires fitting with 3981 EM junction box. Consult with Eureka for full listing.

1 des plusieurs luminaires approuvés par Eureka avec la boîte de jonction d'Urgence 3981. Consulter avec Eureka pour la liste complète.

INSTALLATION

1 - INSTALL THE JUNCTION BOX [A] WITH EITHER SCREWS OR NAILS.

2 - SLIDE THE EMERGENCY BALLAST [B] INTO THE JUNCTION BOX AND MAKE THE ELECTRICAL CONNECTIONS. FASTEN THE BRACKET [C] TO THE JUNCTION BOX WITH A SCREW [D].

3 - CONNECT THE QUICK DISCONNECTS [E] BY REFERRING TO THE WIRING DIAGRAMS. TUCK IN NICELY ALL THE WIRES INTO THE JUNCTION BOX. SCREW THE UNIVERSAL PLATE [F] TO THE JUNCTION BOX THROUGH TWO MOUNTING HOLES [G].

4 - INSTALL FIXTURE [H] TO UNIVERSAL PLATE [F] OR DIRECTLY TO BRACKET [C]. (DEPENDENT ON THE FIXTURE USED)

INSTALLATION

1 - INSTALLER LA BOÎTE DE JONCTION [A] AVEC DES VIS OU DES CLOUS.

2 - GLISSER LE BALLAST D'URGENCE [B] DANS LA BOÎTE DE JONCTION ET FAIRE LA CONNEXION DES FILS. VISER LE BRACKET [C] À LA BOÎTE DE JONCTION AVEC UN VIS [D].

3 - CONNECTER LES QUICK DISCONNECTS [E] EN CONSULTANT LES SCHÉMAS DE CONNEXION. BIEN METTRE TOUT LES FILS DANS LA BOÎTE DE JONCTION. VISER LA PLAQUE UNIVERSELLE [F] À LA BOÎTE DE JONCTION À TRAVERS LES DEUX TROUS DE MONTAGES [G].

4 - INSTALLER LA FIXTURE [H] À LA PLAQUE UNIVERSELLE [F] OU DIRECTMENT AU BRACKET [C]. (DÉPENDANT DE LA FIXTURE UTILISÉE)