



INSTALLATION MAINTENANCE

Ceiling Surface Fixture Plafonnier

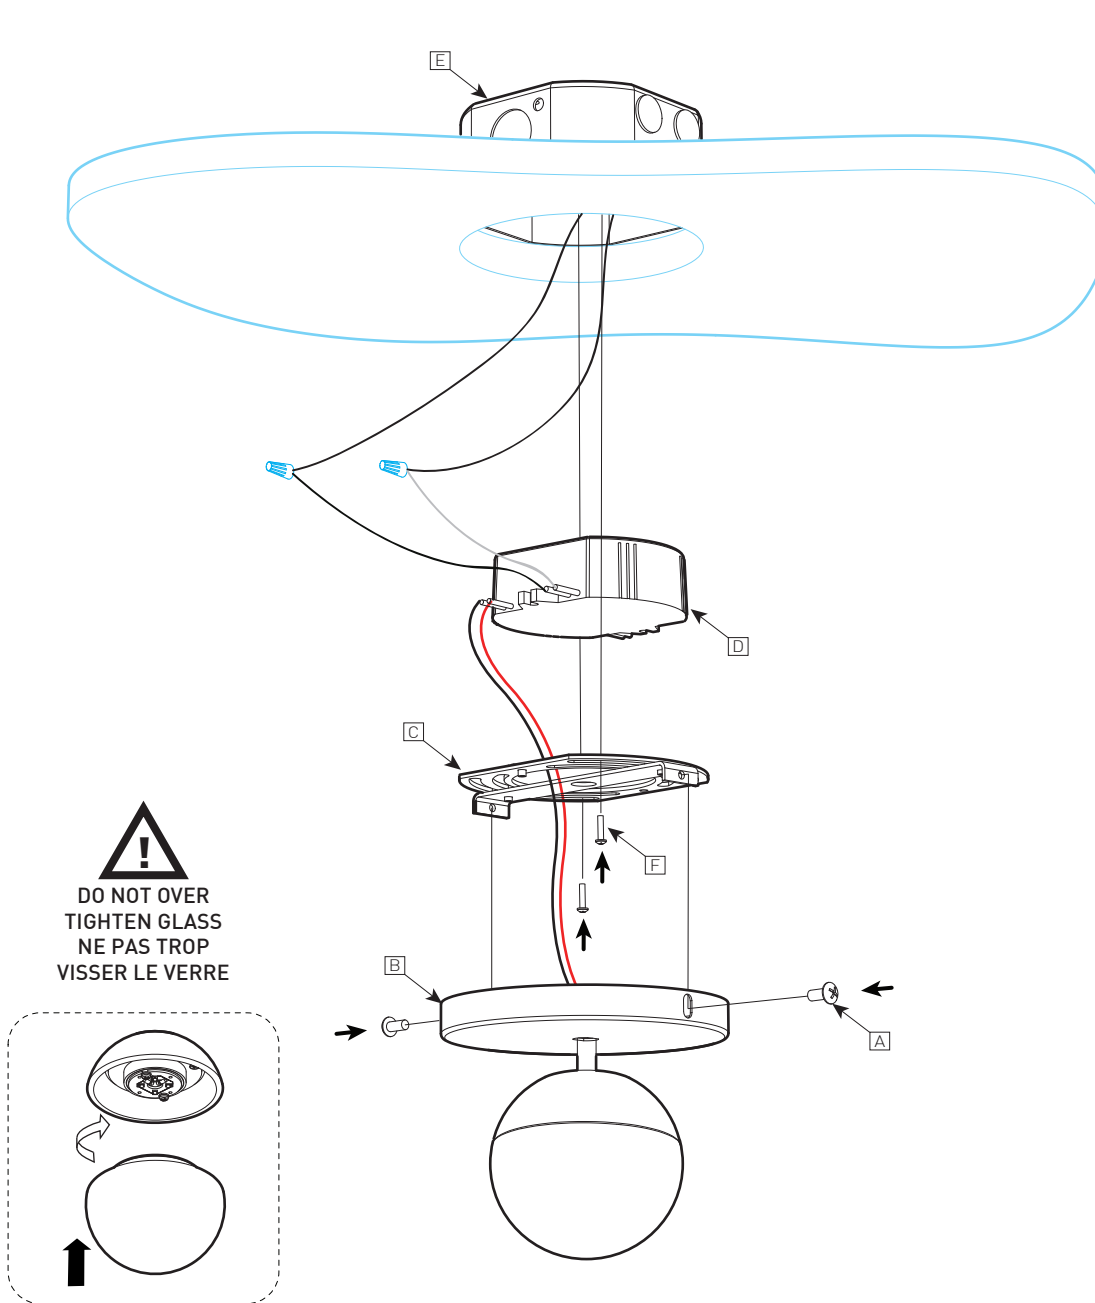


SHADES
ABATS-JOUR

FACET

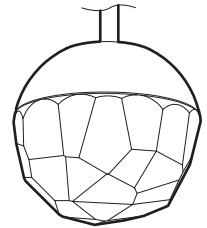


MEHA

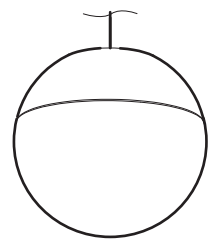

NOTE:

Installation with canopy 2401C requires Deep J-box 3983. Accessory available for advance shipping.

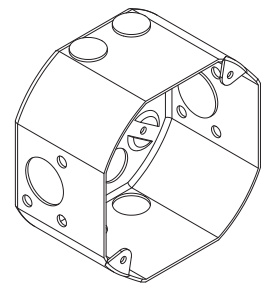

INSTALLATION

REMOVE SCREWS [A] (8-32 X 3/8in) TO RELEASE THE CANOPY [B] FROM THE UNIVERSAL CROSSBAR [C].

1 - PLACE THE DRIVER [D] INSIDE THE JUNCTION BOX [E].
MAKE THE ELECTRICAL CONNECTIONS AND INSTALL THE UNIVERSAL PLATE [C],
(WIRE NUTS AND SCREWS [F] NOT SUPPLIED)

2 - INSTALL THE CANOPY [B] AND SCREW INTO PLACE.

INSTALLATION

DÉVISSER LES 2 VIS [A] (8-32 X 3/8in) POUR LIBÉRER LE PAVILLON [B] DE LA PLAQUE UNIVERSELLE [C].

1 - PLACER LE PILOTE (D) DANS LA BOITE DE JONCTION (E).
FAIRE LA CONNEXION DES FILS ET INSTALLER LA PLAQUE UNIVERSELLE [C].
(MARRETTES ET VIS (F) NON INCLUSES)

2 - INSTALLER LE PAVILLON [B] ET VISSER EN PLACE.